

MILK  
FROTHER  
D053



## INSTRUCTION MANUAL

Imported by Roasting Australia Holding Pty Limited

11 Hoyle Avenue, Castle Hill, NSW 2154

Phone: AU 02 9846 0307

NZ 0800 450 894

E-mail: [caffitalysystem@rfg.com.au](mailto:caffitalysystem@rfg.com.au)

[www.caffitalysystem.com.au](http://www.caffitalysystem.com.au)

AS/NZS 60335.2.15  
IEC 60335.2.15

# INDEX

- Introduction 2

- **Safety Warnings 3**

- **Symbols Guide 4**

## **Instructions:**

- Machine Components 5
- Getting to Know Your Milk Frother 6
- First Time Use 7
- How to Assemble the Accessories for Frothing 7
- Frothing and Heating Milk 7
- How to Assemble the Accessories for Heating 9
- Heating Milk Only 9

## **Cleaning and Maintenance Safty Information:**

- Daily Maintenance 11
- Cleaning Instructions 11

## **Miscellaneous:**

- Troubleshooting 13
- Technical Data 14
- Instructions for Use and Disposal 14
- Caffitaly System Customer Service Contact 14

## CONGRATULATIONS

on the purchase of your New CAFFITALY D053 MILK FROTHER.

This Milk Frother has been designed for frothing and heating milk to add to your coffee to make a cappuccino, latte or flat white at the press of a button.

When used in conjunction with the Caffitaly System Capsule Machine and your favourite Caffitaly compatible capsules, the choice of hot beverages is only limited to your imagination.

### Your Taste...Your Choice




## SAFETY WARNINGS

Read all instructions carefully before you use the Milk Frother and retain the Instruction Manual in a safe place for future reference. Misuse of the D053 Milk Frother could void the warranty conditions.



**IMPORTANT:** DO NOT IMMERSE the base or the milk jug in water or any other liquid. DO NOT WASH any parts in the dishwasher. Doing so will permanently damage the appliance and void the warranty.

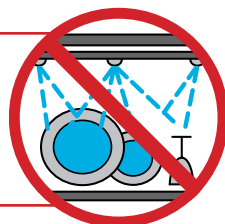

### WARNING:

- Before connecting the appliance to the power supply, check if the voltage indicated on the appliance corresponds with the voltage in your home.
- Only connect the appliance to an earthed wall socket.
- Always disconnect the appliance from the mains if you leave the appliance unattended and before you assemble, disassemble or clean it.
- Do not use the appliance if the plug, power cord or any other parts are damaged. If the plug or power cord is damaged in any manner, return the appliance to your store of purchase or contact the **Caffitaly System Customer Service Line on AU 02 9846 0307 | NZ 0800 450 894**. Do not attempt to repair the appliance yourself as this will void your warranty.
- Do not let the power cord hang over the edge of the surface on which the appliance stands.
- Always place the base and the milk jug on a dry, flat and stable surface.
- Always operate the appliance with the lid firmly in place.
- Do not let any water come into contact with the connectors on the power base and underneath the milk jug. Always ensure these areas are completely dry before use.
- Do not spill any liquid on the connectors. If you do, unplug appliance immediately and dry completely. Always ensure these areas are completely dry before use.
- The heating element surface is subject to residual heat after use. **DO NOT TOUCH!**
- Only use the appliance to heat or froth milk. Do not use it to process any other ingredients.
- Do not overfill the jug with milk past the maximum capacity indicated for frothing and heating as the milk could overflow and cause scalding or electrical issues.
- Do not move the appliance while it is in operation and never leave the appliance unattended while in operation.

Continued on next page... >>

## SAFETY WARNINGS - Continued

- Do not place the appliance on a hot surface and prevent the power cord from coming into contact with hot surfaces.
- Only use the appliance in combination with its original base and accessories. Never use accessories or parts from other manufacturers. Use of such accessories or parts not supplied by the manufacturer or Roasting Australia Holding Pty Limited will void your warranty.
- Do not use the appliance in combination with a transformer, as this could have hazardous results.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, lack of experience and knowledge, unless properly supervised by a person responsible for their safety.
- Children should not operate, play with or near the appliance.
- Keep the appliance and its power cord out of the reach of children.

### CLEANING – CAUTION

- Correct cleaning of the Milk Frother is very important for reliable performance and maintaining good frothing results.
- Ensure you clean the appliance thoroughly after every use. See Page 11 for full cleaning instructions.
- Make sure that the appliance has been switched off before you remove the milk jug from the base.
- Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

This appliance is intended for **Domestic use only**. It is not intended for use in environments such as staff kitchens, shops, offices, farms or other work environments, nor is it intended to be used by clients in hotels, motels, bed and breakfasts and other nonresidential environments.

## SYMBOLS GUIDE



**CAUTION:** This is the safety warning symbol. It is used to call your attention to possible risks of personal injury. Abide by the safety messages provided in order to avoid possible injury or death.



Barista  
Tips



This is the symbol used to highlight some actions that will optimise the use of this appliance.



Not  
Dishwasher  
Safe




Maintenance  
Tips

# MACHINE COMPONENTS

## Machine Parts:



## Spindle Parts:

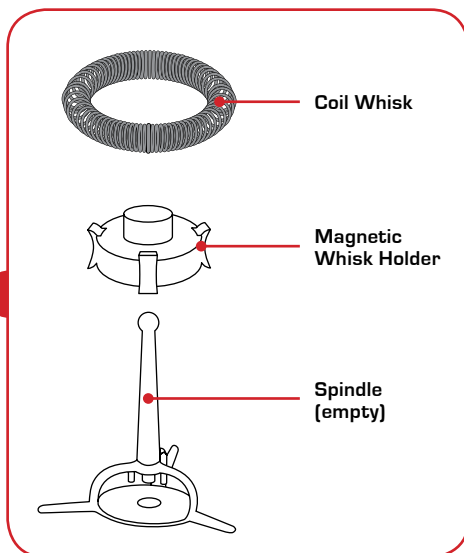

## GETTING TO KNOW YOUR MILK FROTHER

The D053 Milk Frother can be used for the following functions separately:



**Frothing and Heating Milk**




**Heating Milk Only**

Before using your Milk Frother, clean all parts according to the section 'Cleaning and Maintenance' on Page 11.



**IMPORTANT:** DO NOT IMMERSE the base or the milk jug in water or any other liquid. DO NOT WASH any parts in the dishwasher. Doing so will permanently damage the appliance and void the warranty.

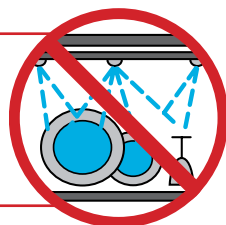

The Milk Frother is equipped with following accessories: (Refer to diagram on Page 5)

- **SPINDLE** – this is used to hold the Magnetic Whisk Holder for heating milk.
- **MAGNETIC WHISK HOLDER** – this is placed into the Spindle for heating milk.
- **COIL WHISK** – this is placed around the Magnetic Whisk Holder and then placed into the Spindle for frothing milk.

**WHEN NOT IN USE: PLEASE KEEP YOUR ACCESSORIES IN A SAFE PLACE.**


**The accessories to use for:**

Frothing Milk



– Spindle, Magnetic Whisk Holder and the Coil Whisk.

Heating Milk Only

– Spindle and Magnetic Whisk Holder only.

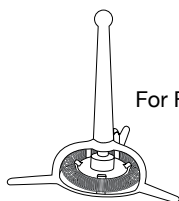

**SETUP  
For Frothing Milk**

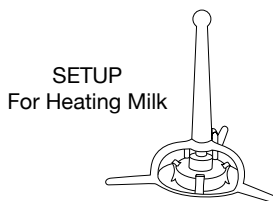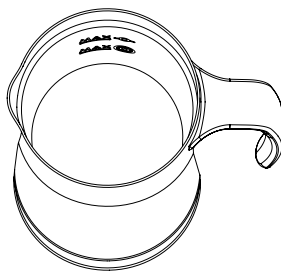

**SETUP  
For Heating Milk**



**NOTE:**

**Frothing Milk** – the minimum capacity is 100ml, the maximum capacity is 150ml.

**Heating Milk** – the minimum capacity is 100ml, the maximum capacity is 250ml.


## BEFORE THE FIRST USE

Ensure you have all the accessories listed on Page 5. The Spindle should already be assembled for Frothing: i.e. the Coil Whisk will be around the Magnetic Whisk Holder which will be sitting within the Spindle. If this is not the case, please check the packaging to ensure it has not fallen out during transit.


Wash the lid and spindle parts in warm soapy water and dry thoroughly. Wipe interior and exterior of appliance with a soft damp cloth and dry thoroughly.

## HOW TO ASSEMBLE ACCESSORIES FOR FROTHING


1.

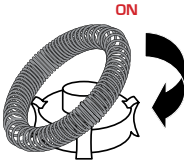


Gently place the Coil Whisk onto the Magnetic Whisk Holder.
2.

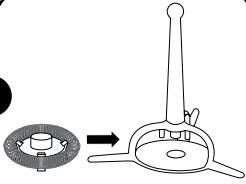

Slot the Magnetic Whisk Holder with the attached Coil Whisk into the Spindle.
3.

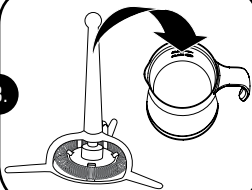

Place the completed frothing Spindle into the jug; you will feel a slight magnetic pull.
- 

**BARISTA TIP:** This setting is perfect to create froth for drinks such as cappuccino, mocha and hot chocolate.

Use cold skim milk for best results.

## FROTHING AND HEATING MILK










**Do not leave the Milk Frother unsupervised when it is in operation. Do not touch any part of the interior of the jug while it is in use as it can cause scalding or burns.**



**IMPORTANT:** For Heating and Frothing Milk – the Minimum capacity is **100ml**, and the Maximum capacity is **150ml**.

Continued on next page... >>



## FROTHING AND HEATING MILK - Continued

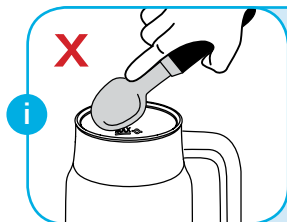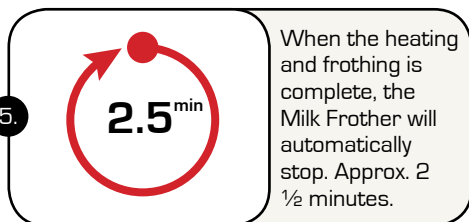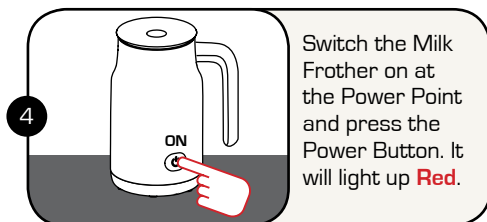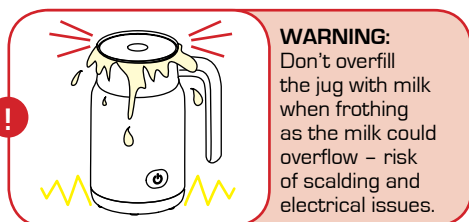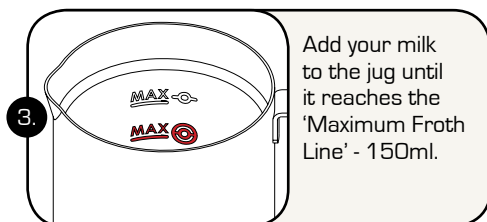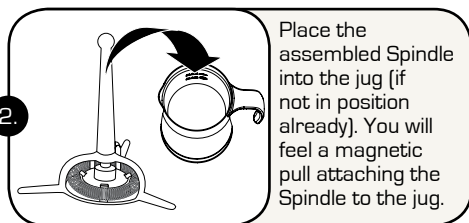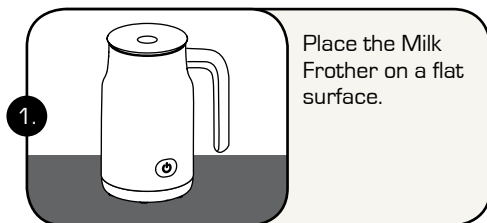




### MAINTENANCE TIP:

Please pour the milk and the froth from the jug.

**DO NOT** use metal spoons or other sharp implements as you may damage the non-stick coating of the inner jug and in doing so void the warranty.

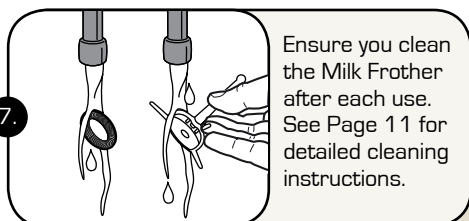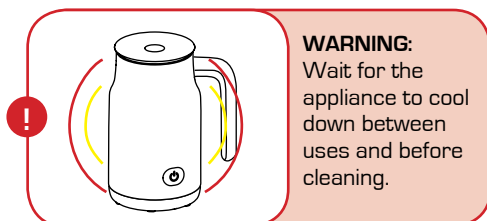

## HOW TO ASSEMBLE ACCESSORIES FOR HEATING

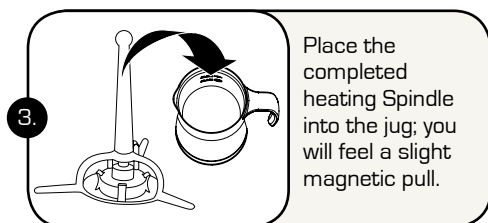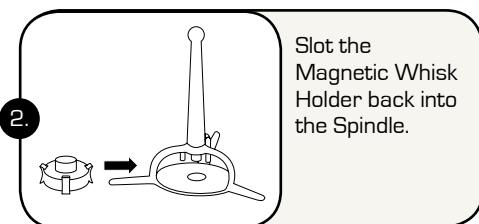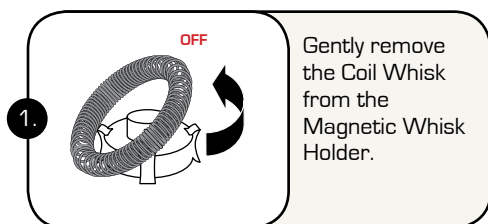

**BARISTA TIP:** This setting is perfect to create heated milk for drinks such as flat whites, caffè lattes and caramelattes.

Use cold skim milk for best results.

## HEATING MILK ONLY



**Do not leave the Milk Frother unsupervised when it is in operation. Do not touch any part of the interior of the jug while it is in use as it can cause scalds or burns.**




**IMPORTANT:** For Heating Milk Only – the minimum capacity is 100ml, the maximum capacity is 250ml.




**NOTE:** The milk frother is designed to heat and froth milk ONLY.

Continued on next page... >>


## HEATING MILK ONLY - Continued

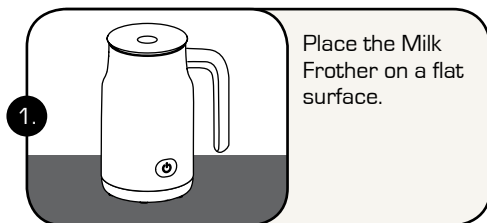


Place the Milk Frother on a flat surface.

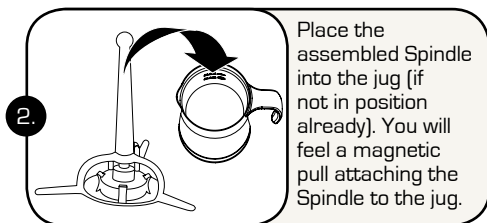


Place the assembled Spindle into the jug (if not in position already). You will feel a magnetic pull attaching the Spindle to the jug.

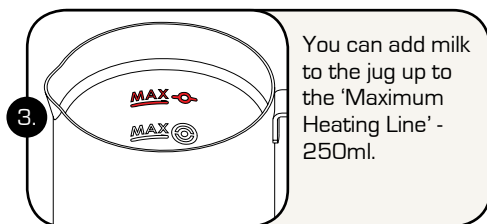

You can add milk to the jug up to the 'Maximum Heating Line' - 250ml.

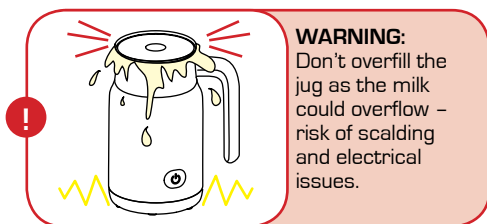


**WARNING:**  
Don't overfill the jug as the milk could overflow – risk of scalding and electrical issues.

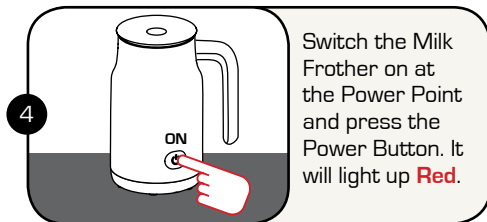

Switch the Milk Frother on at the Power Point and press the Power Button. It will light up **Red**.




When the heating is complete, the Milk Frother will automatically stop. Approx. 3 minutes.

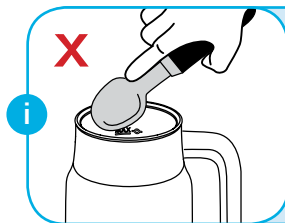


### MAINTENANCE TIP:

Please pour the milk from the jug.

**DO NOT** use metal spoons or other sharp implements as you may damage the non-stick coating of the inner jug and in doing so void the warranty.

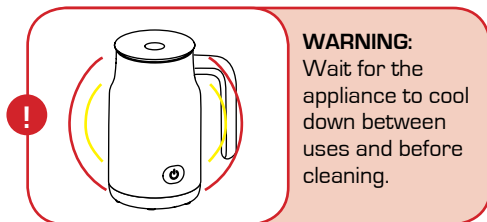

**WARNING:**  
Wait for the appliance to cool down between uses and before cleaning.

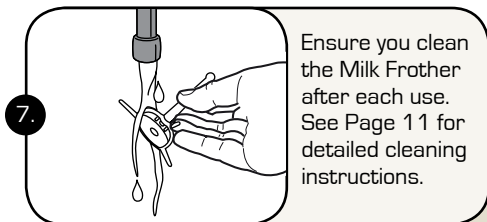


Ensure you clean the Milk Frother after each use. See Page 11 for detailed cleaning instructions.

## CLEANING & MAINTENANCE SAFETY INFORMATION

Please read the safety instructions before cleaning your Milk Frother.  
**ENSURE YOU CLEAN THE MILK FROTHER AFTER EACH USE.**




**IMPORTANT:** DO NOT IMMERSE the base or the milk jug in water or any other liquid. DO NOT WASH any parts in the dishwasher. Doing so will permanently damage the appliance and void the warranty.

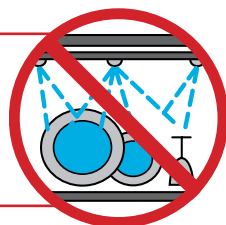


1. Before cleaning, switch off the Milk Frother from the Power Point and unplug.
2. Use a soft cloth only.
3. Do not use any abrasive materials or detergents to clean the inside of the jug.
4. Wipe interior with a damp cloth **AFTER** the appliance has cooled.
5. Clean the appliance again thoroughly if the machine hasn't been used for a period of time.

## CLEANING INSTRUCTIONS

Please follow these steps after each use and before using it again after a long period of time:

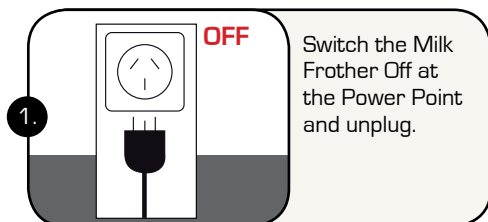




Switch the Milk Frother Off at the Power Point and unplug.

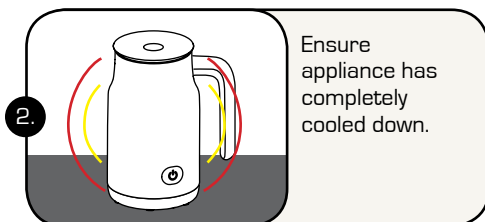

Ensure appliance has completely cooled down.





Continued on next page... >>

## CLEANING INSTRUCTIONS... Continued

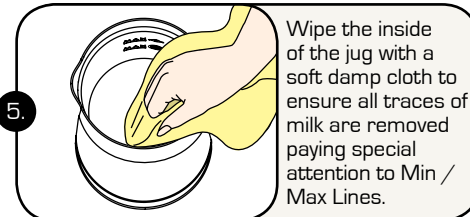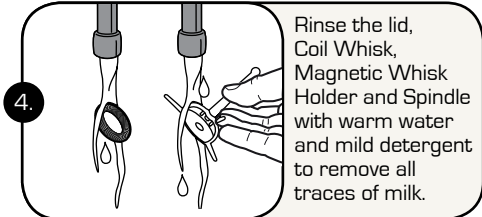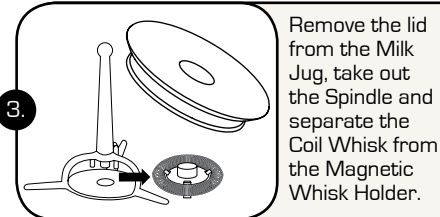

### PLEASE NOTE:

Failure to remove all the milk residue will result in burnt milk adhering to the jug which will affect the performance of the Milk Frother.

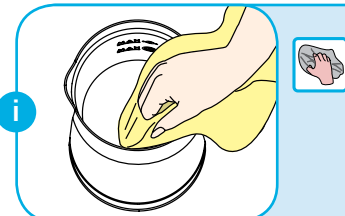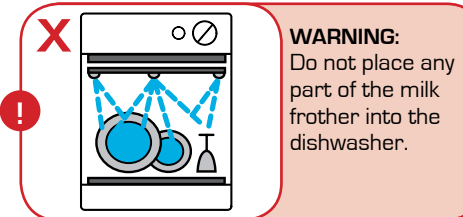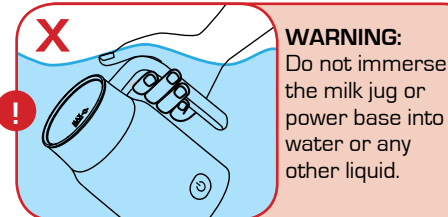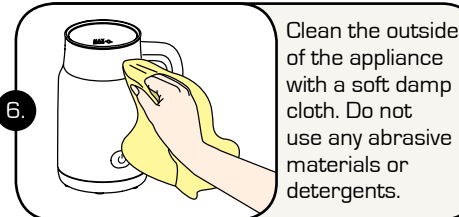

### MAINTENANCE TIP:

If some milk residue is left on the bottom of the jug even after cleaning, leave warm soapy water in the jug to soak for 1-2 hours. Then wipe out again with a soft damp cloth and dry completely before storage.

 


# TROUBLESHOOTING

PROBLEM	CAUSE	SOLUTION
<ul style="list-style-type: none"> <li>- The appliance doesn't switch on. (No Red Light.)</li> </ul>	<ul style="list-style-type: none"> <li>- The plug is not in the Power Point.</li> <li>- The Power Button has not been pressed.</li> </ul>	<ul style="list-style-type: none"> <li>- Check the plug is in the power socket and is turned on.</li> <li>- Press the Power Button on the appliance</li> <li>- If the appliance still doesn't turn on, please contact the <b>Caffitaly System Customer Service Line on AU 02 9846 0307 NZ 0800 450 894.</b></li> </ul>
<ul style="list-style-type: none"> <li>- The appliance does not work after use.</li> </ul>	<ul style="list-style-type: none"> <li>- The motor has turned off.</li> </ul>	<ul style="list-style-type: none"> <li>- The appliance needs to 'cool down' after repeated use. Do not use more than twice without leaving it to cool down.</li> </ul>
<ul style="list-style-type: none"> <li>- The milk is not hot enough.</li> </ul>	<ul style="list-style-type: none"> <li>- Thermostat has shut the appliance off.</li> </ul>	<ul style="list-style-type: none"> <li>- The temperate is set between 62 – 72 °C, once this temperature has been reached, the appliance will turn itself off. It will not heat the milk to a higher temperature.</li> </ul>
<ul style="list-style-type: none"> <li>- Appliance has been turned on and is not working after cleaning.</li> </ul>	<ul style="list-style-type: none"> <li>- Water has entered into the electrical casing.</li> </ul>	<ul style="list-style-type: none"> <li>- <b>Possible Solution:</b> Take the appliance off the Power Base. Turn the jug onto the side to dry for 48 hours. Please note: by allowing water to enter the Electrical casing, you have voided your warranty.</li> </ul>
<ul style="list-style-type: none"> <li>- The milk is not frothing.</li> </ul>	<ul style="list-style-type: none"> <li>- Frothing Coil is not in place</li> <li>- Magnetic Whisk Holder is not in place.</li> </ul>	<ul style="list-style-type: none"> <li>- Check the Magnetic Whisk Holder has the Frothing Coil around it.</li> <li>- Check the Magnetic Whisk Holder is set firmly into the Spindle. Refer to Page 7.</li> </ul>

If any of the above solutions are not correcting your problem or you have any further questions/enquiries, please contact the Caffitaly System Customer Service line on: **AU 02 9846 0307 | NZ 0800 450 894.**

## TECHNICAL DATA

The rating plate with the connection and performance data can be found on the base of the appliance.

Device	Milk Frother
Model	D053
Mains Data	220~240 V, 50 - 60Hz
Power Consumption	300-350W
Capacity Frothing	Min: 100 ml, Max: 150 ml
Capacity Warming	Min. 100 ml, Max: 250 ml
External Measurements	 202 mm  167 mm  118 mm
Net Weight	Approx. 0,84 kg



You can help protect the environment!  
Please remember to respect your local regulations:  
Hand in the non-working electrical equipment to an  
appropriate waste disposal centre.

## CAFFITALY SYSTEM CARE CONTACT

Phone: **AU 02 9846 0307**

**NZ 0800 450 894**

E-mail: [caffitalysystem@rfg.com.au](mailto:caffitalysystem@rfg.com.au)

For more information on the machine operation, available  
capsules and other useful hints and tips go to the Caffitaly website:

**[www.caffitalysystem.com.au](http://www.caffitalysystem.com.au)**



**When you use a Caffitaly System Capsule Machine, you are free to choose from your favourite Caffitaly Compatible Brand.**

**Your Taste...Your Choice**



For more information on the machine operation,  
available capsules and other useful hints and tips  
go to the Caffitaly website:

**[www.caffitalysystem.com.au](http://www.caffitalysystem.com.au)**

# WARRANTY DETAILS

Dear Customer,

Thank you for buying this product. This Machine has been designed and produced using the best technologies available.

## 1. Warranty Details:

- (a) If your Caffitaly System Machine develops a fault or defect during the warranty period, and subject to the terms below, we will repair it or replace it.
- (b) We offer this warranty on top of any guarantees imposed by the Australian Competition and Consumer Act 2010 and any other applicable State or Territory legislation (if your product was purchased in Australia) and the New Zealand Consumers Guarantees Act (if your product was purchased in New Zealand).
- (c) The warranty applies for 12 months from the date of purchase.
- (d) The warranty covers fault or defects in the product's materials or manufacturing.
- (e) The warranty does not cover:
- (f) Misuse, or use other than in accordance with the product's instructions;
- (g) Negligence on your part;
- (h) Normal wear and tear; or
- (i) Faults or defects caused by third parties, including work done by unauthorised service or repair agents.

## 2. Making a Warranty Claim

- (a) To make a claim you should first contact the **Caffitaly System Customer Service Line** by telephone on **02 9846 0307** in Australia or **0800 450 894** in New Zealand and we will be able to provide you with the appropriate next steps for service or replacement of your machine.
- (b) Before contacting the Caffitaly System Customer Service Line, please make sure you have carefully read the Instruction Manual supplied with the machine.
- (c) After you have initiated the claim via the telephone, we may ask you to return the product to us, as per the address details in Point 4.
- (d) You will need to provide your receipt as proof of purchase in order to make a claim under the warranty.
- (e) Once you return the product and lodged a claim to us, we will assess the claim and let you know whether it is covered. The decision whether to repair or replace a product

is at our sole discretion unless there is a 'major failure' as defined in the Australian Consumer Law or New Zealand Consumers Guarantees Act.

- f) If it is covered we will deliver the repaired or replaced product back to you. We will bear this cost.
- g) If it is not covered, we will deliver the product back to you and you will bear the transport cost.

## 3. General service and repair enquiries

For general service and repair enquiries, please contact us on the telephone number below.

## 4. Roasting Australia Holdings contact details

Roasting Australia Holdings Pty Limited  
11 Hoyle Avenue, Castle Hill, NSW 2154  
Phone Australia: 02 9846 0307  
Phone New Zealand: 0800 450 894

## 5. Statutory Guarantees

As well as the Roasting Australia Holdings Pty Limited warranty, our goods come with guarantees that cannot be excluded under the Australian Consumer Law and New Zealand Consumers Guarantees Act. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

## 6. Claim Details

If you are making a claim under the warranty or the statutory guarantees, we will require the following information from you:

- a) Name;
- b) Address;
- c) Product purchased;
- d) Date of purchase;
- e) Machine Serial Number;
- f) Shop of purchase;
- g) Description of the problem.